


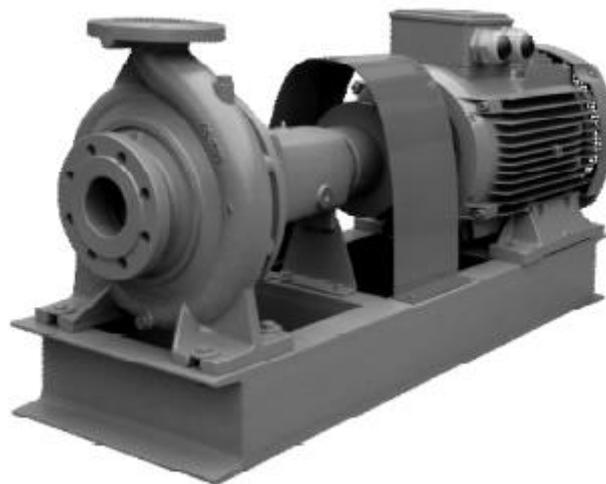

# TKF, MKF, TAF Series Motor Water Pumps



**ENGLISH INTRODUCTION AND USER MANUAL**

## **TABLE OF CONTENTS**

General Warnings	1
Safety Instructions	2
Application Areas	3
Shipping and Storage	4
Transportation	5
Storage	6
Installation	7
Electrical Connections	13
First Operation	15
Lubrication Control	17
Dismounting of Pumps and Repair	18
Spare Parts	21
Pump Cross Section Drawing	22
Failures and Troubleshooting	22
Tightening Moments	25
Noise Level	26
List Indicating Service Stations	27

## GENERAL WARNINGS ABOUT USER MANUAL

Aim of this user manual is; ,

- to convey instructions about installation, maintenance and repair of pump, and to explain start, operation and stop methods of pump.



- Absolutely keep this manual in a secured place to be accessed easily by official who is responsible for safe operation and maintenance of pump.

- Pump should not be operated under conditions which are not mentioned in purchase order. Because, operational conditions which are given in purchase order are considered at material selection and trial.

SEMPOMP , does not accept any warranty conditions for all kind of changes and repair operations which are performed by user and unauthorized people.

- Instructions in this manual should carefully be examined and applied in every installation and operation process of pump for preventing misuse.

- Responsible Personnel should be experienced and have knowledge about related standards.

- If it is necessary to operate pump under conditions out of the ones those are mentioned in purchase order, please contact with SEMPOMP authorized service. SEMPOMP shall not be liable for damages which may occur because of operation under conditions out of mentioned ones without written permission of service.

- If carried pumps shall not be installed immediately, it should be kept in an environment where temperature and humidity does not change so frequently. If appropriate precautions are not taken, very high temperatures and low temperatures and humidity may severely damage pump.

- User is responsible for control and installation to be performed by authorized personnel who have read and examined this user manual.

This user manual does not cover safety rules to be applied in usage area.

Usage time for pumps which is determined and announced by Ministry is **5(five)** years.

## SAFETY INSTRUCTIONS



- You should absolutely obey the following safety instructions.

- Never touch the pump and pipes having temperature more than 80 °C. Necessary precautions should be taken for warning users. (E.g Warning signs and signboards )
- Never operate pump in reverse direction.
- Do not walk over pump or pipes which are connected to pump.
- Any operation which will be done in pump should be performed by at least two staffs.
- No works should certainly be done over without stopping pump group.
- Power coming to pumps should be off and you should be sure that it will not operate again before you make any work
- Absolutely install the safety guards which were dismantled before after work in pump has finished.
- Tensions and cricks in pipe system absolutely should not reach to pump.
- Do not make any operation while pump and pipes which are connected to pump are under pressure.
- Cloths of personnel who will work over should be suitable and/or they should use safety equipments.
- Never do any operations when pump is still hot.
- Electrical connection related with pump and auxiliary equipments should be suitable with local rules and made by authorized personnel.
- Operate pump with only specified conditions.
- Do not insert your hand and fingers into holes and spaces over pump body.
- Be always careful while working with pumps discharging hazardous liquids.

## TECHNICALLY DIFFERENT PORPERTIES of TKF-MKF-TAF SERIES PUMPS

This series of pumps do not have any shape and appearance difference, technical differences are given below.

\***TKF SERIES PUMPS** have triphase motors , horizontal shafted, radial separable scroll cased, single staged, suction from edge, have **closed impellor**, monoblock, frame coupling connected, can be installed from behind and they are centrifugal pumps.

\***MKF SERIES PUMPS** have monophase motors , horizontal shafted, radial separable scroll cased, single staged, suction from edge, have **closed impellor**, monoblock, frame coupling connected, can be installed from behind and they are centrifugal pumps.

\***TKF SERIES PUMPS** have triphase motors , horizontal shafted, radial separable scroll cased, single staged, suction from edge, have **open impellor**, monoblock, frame coupling connected, can be installed from behind and they are centrifugal pumps.

**Impellors of TKF and MKF series pumps are closed impellor**



**Impellors of TAF series pumps are open impellor.**




Sizes of pump bodies are suitable with TSE EN 733/DIN 24 255

### Usage Areas of Motor Water Pump

Pumps are suitable for discharging liquids which are low viscose, whose flow temperature is up to 140°C and which are clean or a little dirty. (Max20mg/dm<sup>3</sup>) . In addition to others; main application areas are:

- Heating and Cooling Systems
- Water Supply
- Fire Extinguishing Plants
- Water Supply and Circulation Systems in Industrial Plants
- Watering Systems
- Power Stations

## Explanation of Pump Codes

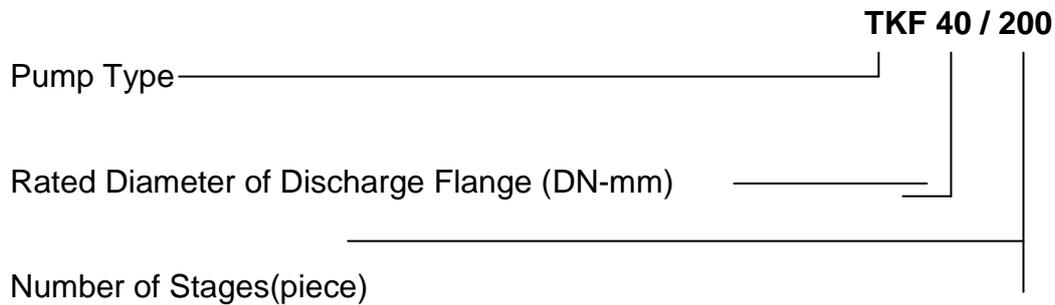

### Technical information

Speed : Up to 3600 d/d rpm

Discharge Flange : DN32 ... DN250

Suction and Discharge Flanges : TS ISO 7500-2/PN16, DIN2533/PN16

Operational Temperature : -10°C ... 140°C cooled soft gasket

Ambient Temperature (Maximum) : +40°C

Body Pressure : 30 bar - (50 Bar)

Isolation Class : F

Protection Class : IP55

Motor Connection : 3 Phase-380 V-50 Hz 1 Phase-220-50Hz

Motor Options (Optional) : Special Voltage Special Frequency

### SHIPPING of PUMPS

- Check whether all materials in delivery list are sent. .
- If there is damage during shipping please notify SEMPOMP Shipping Department and Transportation company.
- If there are missing materials, immediately inform SEMPOMP Shipping Department.
- Check whether packaging is damaged during transportation.
- Please carefully take out packaged pump and accessories (if any). Check whether they are damaged during transportation.

## CARRYING

### General warnings.




Absolutely obey the following rules during transportation.

- Use proper wooden crane, forklift, or hoisting mechanisms For unloading or loading wooden cases, packages, boxes and palettes depending on their weight and volume.
- Wear gloves, hard tip shoes and helmet during carrying works.
- Never stay under hoisting mechanism while loading or unloading pumps.


### Pump and Motor Group Loading/Unloading

Before loading/unloading pump group please determined the following properties.

- Please find the lifting points.
- Please consider total weight and centre of gravity.
- Please consider the packaging external dimensions
- During loading/unloading make accelerating and braking operations as it shall not cause any damage for working personnel.
- Load lifting capacity should be suitable with pump and pump group weight.
- You should never stay under or near lifted load.
- Pump should be hoisted as it is indicated in **Figure 1-1 and Figure 1-2** for not causing any damage in pumps. Motor hanging ring should absolutely not be used while lifting complete group.
- Load should be kept in lifted position more than required time.
- Pump and pump group should always be lifted and carried in horizontal position

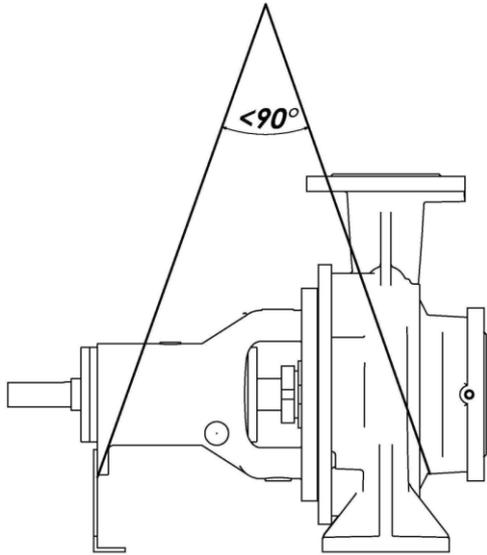

**Figure 1-1 OnlyPump**

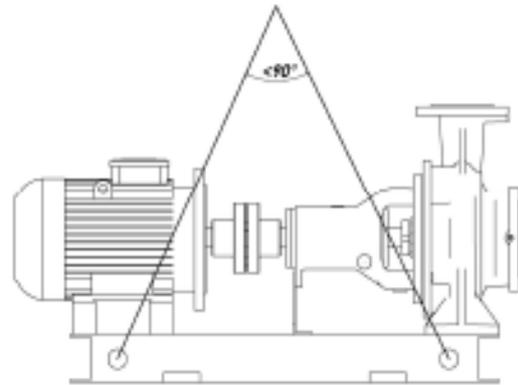

**Figure 1-2 Motopump with frame**

### **STORAGE**

- If pump group is not immediately installed, it should be stored in a place which is clean dry and does not include freezing and explosion risk.
- If pump bearing are type which should be greased, they should be extra greased for preventing entry of moisture to bearings around shaft
- Pump should be protected from moisture, dust, dirt and foreign objects by covering with suitable material.
- Pump shaft should be rotated a few turns (e.g once a week) for preventing pitting around pump bearing surfaces and jamming of shaft.

### **INSTALLATION**

Installation of pump to its place and connection setup should only be done by expert personnel. Failed installation and pump ground may cause failures.

This situations are not covered with warranty

- If pump is purchased as single pump (without motor and chassis); a proper frame should be constructing for putting this group over it. Frame to be constructed should have dimensions and robustness which will not permit vibration and shape defects.
- If pump is supplied without motor (Pump+frame), proper motor should be selected prior start to installation of group.

Following properties should be considered during motor selection.

- Maximum power of pump (in all operation ranges)
- Operational revolution of pump shaft
- Necessary power supply
- Motor Type
- Motor connection type ( footed, flanged, horizontal, vertical etc. )

Coupling (clutch) setup is obtained by pump and motor having identical axis. All parts of pumps mainly pump and motor bearings may have damage because of vibration caused by unadjusted coupling.

### **Before start to pump installation**

- Protecting parts in discharge and suction flanges should be removed and cleaned well.
- Pump should be installed in a places which does not have freezing or explosion risk and have well air conditioning.
- There should be enough space around pump for accessing pump easily and for maintenance operations and there should be sufficient height and space for lifting pump if necessary.
- Pump suction pipe should be as short as possible.
- You should be carefully work at pump installation ground preparation and installation of pump group into its place. Incorrect and careless installation causes early wearing of pump parts and failures.
- Pump ground should be so heavy to absorb vibrations and sturdy to prevent bends and adjustments defects. Ground concrete should completely be solidified, completed its plug time and proper stud bolts are placed in pump frame fixing holes and proper fixing lugs should be placed for using in making connections with welding. Concrete and plate upper surface should be horizontal and very smooth.

### **Installation**

#### Installation of pump group to ground by anchoring stud bolts:

- Pump group is placed to center the stud bolt slots which are opened in ground concrete.
- Anchoring stud bolts are inserted through fixing holes over pump frame fixing holes and places into their slots.
- Pump group is placed over base concrete. Water balance is placed over pump discharge flange and horizontality of pump is controlled. If there is a horizontal imbalance in pumps position, steel wedges are put under frame and balance of pump group is obtained.

- Nuts of anchoring stud bolts are installed.
- Anchoring stud bolt holes are filled with concrete grout.
- Anchoring stud bolts are reciprocally tightened.
- Coupling setup is controlled in this situation.
- Concrete is poured into pump frame. Joining of poured concrete and ground concrete is cared.
- Complete binding of concrete is controlled and anchoring stud bolts are reciprocally tightened.
- Coupling adjustment is again controlled with template. If there is maladjustment, coupling adjustment is made again.
- Discharge and suction flange fixings of pump are controlled again. If there are unnecessary strains and cricks they are eliminated.
- Coupling guards are placed after coupling adjustment.


:Installation of pump group with concrete fixing plug :

- Pump is placed into ground concrete or the ground to be installed carefully.
- Pump group frame fixing holes are marked to concrete. Pump group lifted again.
- Marked places where fixing plugs will be placed are drilled carefully according to standards.
  - Fixing plugs are carefully placed into drilled places.
  - Steps for installation with anchoring stud bolt are made here with same order.

**Clutch Adjustment**

- Most important factor in operation of pump group without problem is the correct adjustment of clutch setup. Basic reason for many problems such as vibration, noise, bearing warming is lack of adjustment or not proper adjusted clutch. Therefore clutch setup should be done well and frequently controlled.
- Making clutch with flexible materials does not mean that it is a part which will correct a bad adjustment

**Figure 2 Clutch Adjustment**

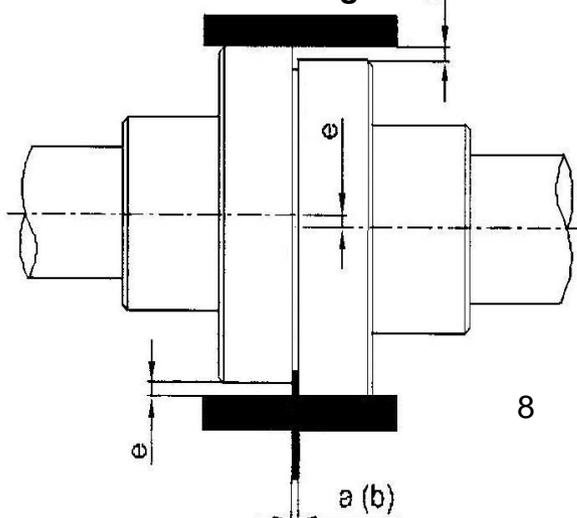

-“Clutch Setup” is to provide motor and pump rotational axis over in straight line

If TKF-MKF-TAP type motors are ordered with motor and frame, necessary clutch adjustments

are made in our factory. However, adjustment can have failure during carrying, storage and installation. Make an clutch adjustment discarding the adjustment made in our factory

- Two pieces of suitable length of smooth sided template, or steel ruler and a precise caliper is necessary for clutch setup. (More precise tools should be used for more precise adjustment)

- Two types of failure may occur during adjustment


a) Angular Failure

b) Parallel Shifting failure


- Distance between two parts of clutch are mutually measured in vertical and horizontal plane

. Distance which were measured between those four points should be equal.


- . A smooth edged template is pressed parallel with one part of clutch and position of template with respect to other part is observed. Template should contact with both parts same time and with whole edge

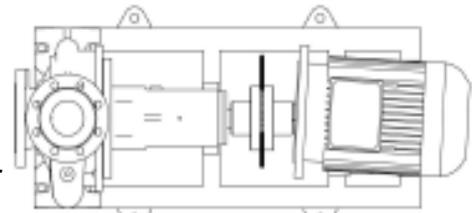


**Figure 3-1 Angular Failure in Horizontal Plane**

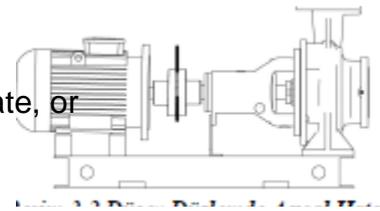

**Figure 3-2 Angular Failure in vertical Plane**

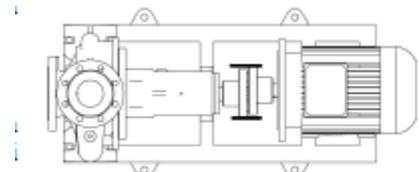

**Figure 3-3 Parallel shift failure in horizontal plane**

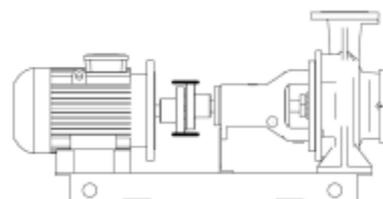

**Figure 3-4 Parallel Shift failure in vertical plane**

This operation should be performed in reciprocal two places in horizontal and vertical plane. **9**


Adjustment errors can be in horizontal and vertical plane. Errors in vertical plane are eliminated by putting thin steel sheets under feet of pump or motor, errors in horizontal plane are eliminated by making adjustments in spaces of fixing holes or sliding motor in horizontal plane.

- Form and order of clutch adjustment are displayed in **Figures 3-1, 3-2, 3-3 and 3-4**. ATTENTION: Adjustments should be checked after changes. Because an adjustment which is made in one direction may make other adjustment in other direction faulty.

### Installation of Pipe Equipment

- Nominal diameter of pump discharge and suction pumps are not an indicator for correct diameters for discharge and suction pipes. Pipes and accessories having diameter less than pump opening diameter should absolutely not be used. Especially bottom backwater valve, dirt retainer, filter and check valves and similar elements should be chosen to having a larger passing area.


-Cricks and stresses in pipe and pipe weight equipments should be controlled whether they effect pump. For this reason, bolts of discharge and suction flanges should be loosen and it should be controlled whether pipe system exerts a stress over pump.

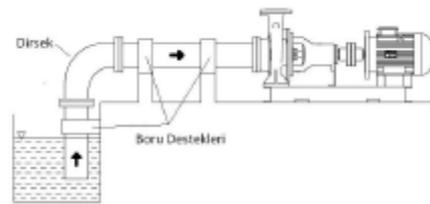

**Figure 4-1 Suction from Depth**

- Never use pumps as a support point or carrier for a pipe installation

- Flow rates generally should not exceed 2m/s in suction pipe and 3 m/s discharge pipe. High speeds cause decrease in pressure which will cause cavitations conditions and excess friction losses in discharge pipe.

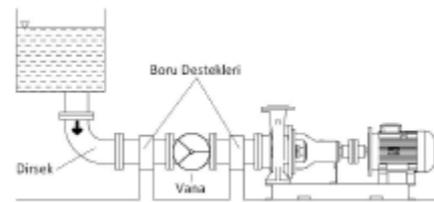


**Figure 4-2 Suction from height**

- Pipe system should be supported from points which are close to pipe. **Figure 4-1/4-2**


- Pipe connections should be made by flanges. Flanges gaskets should be produced from suitable material and should have suitable dimensions. Gaskets which will be used between flanges should be centered for not preventing water flow.

- Proper expansion equipments should be used for preventing additional forces to pump which may occur because of expansion in systems which operate in over vibrant and hot liquids. 1

- Welding burrs, metal particles, which may occur during pipe equipment production sand, and oakum and similar foreign objects may present inside pump. Suction and discharge flanges should be closed with gasket without hole for preventing those materials enter into pump during installation. At the end of installation, all pipe parts should be dismantled, cleaned and dyed and installed again. If dirt retained is used at pump suction line, it should be removed and cleaned after first few days of operation and installed again.

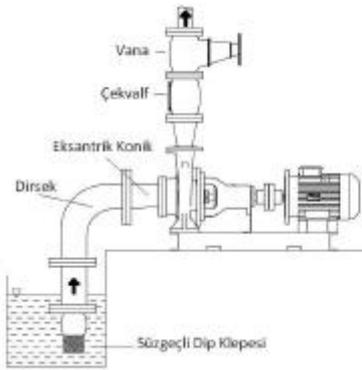

**Figure 5-1 Suction from Height**

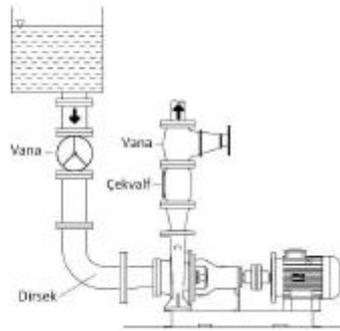

**Figure 5-2 Suction from Height**

### **Suction and Discharge Pipe Connections**

- If pump is supplied from a tank which is higher than pump, there should be an isolation valve in suction pipe whose axis will be in horizontal position. This valve should be completely open while pump is in operation and should never be used as flow rate adjustment valve. (Attention: Closing valve may cause pump operation with cavitations. )

- Suction pipe should absolutely be impermeable and should not be arranged to cause any air wall. In this case if a tank is supplied from a tank which is higher than pump, (suction high installation) suction pipe should be slightly decreasing sloped towards pump and supplied from a tank which is lower than pump, suction pipe should be slightly increasing sloped towards pump.

- Sharp bends should not be used, sudden direction changes and cross section narrowing should be avoided and suction pipe should be short as possible for keeping pump friction losses as low as possible. If there is need of cross section change in horizontal suction pipe, an intermediate eccentric conical part whose flat type is at upper side should be used.

- If pump discharging height is more than 10 m or discharging line is very long, a check valve should be placed over discharging pipe between pump and isolation valve for protecting pump against water impulses and reverse flows during stop.

- A control valve which is close to pump should be connected for flow rate and discharge height adjustment.

- If pump discharging height is more than 10 m or discharging line is very long, a check valve should be placed over discharging pipe between pump and isolation valve for protecting pump against water impulses and reverse flows during stop.



### **Auxiliary Pipe Connections and Accessories**

Depending on the practice auxiliary pipe connections (necessary seal, cooling, seal washing, watering, drain, etc and/or) pressure gauge, temperature gauge connections can be used for controlling operational conditions.

- Pressure or vacuum gauges should be installed sturdy in measurement points which are over flanges or very close to flanges by means of estimated 8 mm pipes which are bended in spiral form. Air taking valves should be used for devices to operate safely and precisely.

- There are connection places in every pump for discharging pump and removing leakages in seal bed. **(Figure 6)**. Those connections can be connected to discharge tank by means of pipes if requested. There should be isolation valve in pipe which is used for pump discharging and this valve and pipe should be suitable with maximum operational pressure of pump.

- Seal cooling, watering and washing pipes should be connected to correct places over pump body which are specified for them.

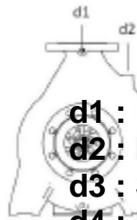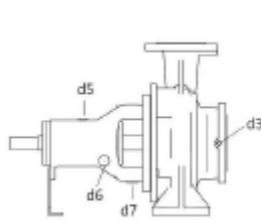

**Figure 6**

- d1** : Discharge Opening Pressure Gauge Connection
- d2** : Liquid Filling/Air Take Hole
- d3** : Suction Opening Pressure Gauge Connection
- d4** : Liquid Discharge Hole
- d5** : Oil Filling Hole
- d6**:Oil indicator
- d7** : Seal Discharging Hole

**By-Pass Valve Connection**

- A by-pass valve should be placed over discharge pipe just after pump and before adjustment valve or outlet flange of pump if there is a case that pump will operate in conditions that pump discharge valve is completely closed(that is with zero flow rate) or almost closed (that is with very small flow rate). If such valve is not used and pumps operates with closed valve for a long time, power which is provided by motor will completely transform into heat energy and pass into discharged liquid. This may cause over heating and abnormal failures in pump.

**ELECTRICAL CONNECTIONS**




- Electrical connections should be done by authorized electricians National instructions, regulations and instructions of motor manufacturers should be obeyed.
- Power cables should absolutely be installed as not having contact with pipe installation, pump and motor body.
- Motor shaft should be rotated by hand before making electrical conditions to control whether it rotates easily.
- It is recommended to use PTC(Passive Thermal Control-Thermistor) in motors. However usage of those depends on customer. If PTC is used ends of those should be connected to motor terminal box and later should be connected to PTC control device in motor control panel.
- Electrical motors should be protected against overloading by circuit breakers and/or fuses. Circuit breakers and/or fuses should be selected with respect to full load values those are written in nameplate on motor.
- Compare and control voltage, ampere and frequency values which are given in motor nameplate with line values.


- Motor connection scheme can be found in motor terminal box or in handbook.
- Motor electrical connections should be done according to local Electrical Regulations and grounding connection should absolutely be done.
- Protection class of motor body and control system cases in pump should be at least EN 60029 IP 22. In addition to this, protection class of motor bodies and control systems in pump group should be determined according to operational and environmental conditions.
- Safety precautions which are determined in "Safety Instructions" should be applied. All power connections should be disconnected before starting to any work.
- Motor connection type changes according to motor mains power and connection type. Necessary connection types of jumpers in terminal box are displayed in **Table 1 and Scheme 1a-1b and 1c**

Start Type	Motor Power PN<4kW	Motor Power PN >4kW
	Mains Power 3~400V	Mains Power 3~400V
Direct	Y-connection (1b)	$\Delta$ -connection (1a)
Y/ $\Delta$ Star Delta	Impossible	Remove Jumpers (1c)


Table 1

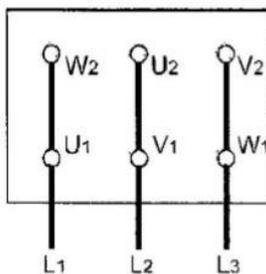

Scheme 1a

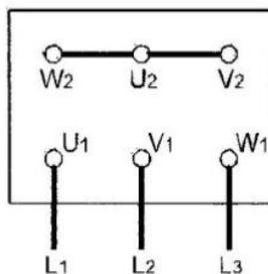

Scheme 1b

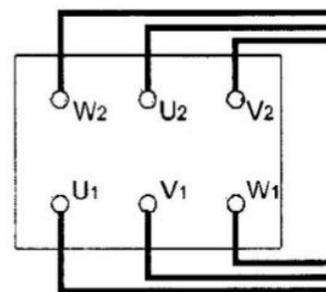

Scheme 1c

**Attention!** Transition time from star to delta should be short in star-delta connected motors. In case that it is long damages may occur in pump and motors.

Motor Power	Y- Setup time
<30 kW >30 kW	<3 seconds <5 seconds

**Table 2**

- After all abovementioned operations are completed, pump rotor should be rotated a few turns for being sure that it rotates easily.

- All safety guards should be installed into their places. Pump should absolutely be not operated after this operation is made. This is a safety and occupational safety rule which should absolutely be obeyed.

### **FIRST START**

#### **Controls Before Operation**

- If there is bottom back flow water valve in pump with depth suction; they are filled with water from filling hole in highest point and its air is taken.

- This case does not cause problem in force feed pumps. Suction valve is opened if any. Air plugs are loosen and discharge of air and completely filling of pump is provided.

- If system includes vacuum pump, rise of water in suction pump by means of vacuum pump and filling pump is provided. When water reaches the highest level pump is started.

- Pump bearings are shipped from the factory as being filled with grease which will be enough for one year.

- Before first start of pump, bearings should be checked whether there dirt has entered into it during shipment and installation. If bearings are dirt they should be completely be cleaned and greased again.

- If pump has waited before installation for a long time (more than 6 months), new grease should be inserted into bearings.

-Be sure that there is water in water tank and/or water source

- Be sure that pump and suction pipe is completely filled with water.

**ATTENTION!** Never let pump run in dry conditions.

## **Determination of Rotation Direction**

- TKS-MKF-TAF type pumps rotates in clockwise direction when you look from clutch towards pump. This direction is shown with an arrow in pump body. Pump is operated for a short while and checked whether it rotates in correct direction. If protection guard is uninstalled during this operation, it should immediately be installed after this operation.

## **Starting Pump**

- Check that suction valve is open and discharge valve is closed.
- Close the circuit breaker and start the motor.
- Wait motor to reach full speed. (Wait motor to pass delta in motors operation with star-delta)
- Observe the ammeter in panel and slowly open discharge valve. (If discharge pipe is empty in first start, do not open discharge valve completely and open in controlled way by controlling that value in ammeter is lower than motor rated values.)
- After valve is completely opened control the value which is read from ammeter whether it is same with the value at operational point. If the ammeter value is less than operational value adjust it by closing the valve. If it is greater check the installation and static height.

**ATTENTION:** If any of following problems occur while pump operates in nominal speed; pump should immediately be stopped and trouble should be eliminated.

- 1) Pump operates with over vibration.
- 2) Pump and motor connection bearings have over temperature.
- 3) Pressure is not enough.
- 4) Pump discharges no water.
- 5) Flow rate continuously decreases.
- 6) Motor operates overloaded
- 7) Pump operates with very much noise.
- 8) Pump does not discharge sufficient water.

## **Stopping the Pump**

- Slowly close the discharge pump.
- If there is water impulse prevention equipment in Discharge line and if the impulse which may occur is not in dangerous levels, you can stop the pump without closing the valve.
- Stop the motor. Watch that pump group has stopped calm and regular way.

- If there is external feed to seal, close this for decreasing the pressure in seal.
- If pump will be out of service for a long time close suction valve and auxiliary circuits if any.
- If there is frost danger and /or it will not be used for a long time, completely discharge water inside pump by means of discharging plug over pump body. Take necessary precautions against freezing risk.

### **Controls to be Made While Pump is Running**

- Since pumps have mechanical seal it does not need any maintenance. A few amount of water may leak from mechanical seal but it is so small that it can not be noticed. If the amount of water coming from mechanical seal this means that seal surface is abraded and needs to be replaced. Lifetime of mechanical seal is mainly depends on cleanness of discharged water.
- Motor current should sometimes be controlled from ammeter over electrical panel which controls the motor. If current values are more than motor nameplate values there may be friction or squeezing in pump. Pump should immediately be stopped and mechanical and electrical controls should be done.
- If there are spare pumps in system, this type of pumps should be run for a short while at least once a week and controlled whether read for operation. Control with auxiliary elements if any.
- Pump should absolutely be run in closed valve condition (zero flow rate) for a long time.
- Pump should operate silent and without operation.
- Bearing temperatures should never exceed ambient temperature (more than 50°C ). It should never exceed 80°C
- Never operate pump without water.

### **LUBRICATION**

Bearings in SEMPOMP pumps are designed to be lubricated with grease or liquid oil and having an easy maintenance.

- Normally bearings of TKF-MKF-TAF type pumps are lubricated with grease. However pumps with type TKF 200/500 and TKF 250/500 1450 rpm always uses liquid oil roller bearing bed.

## **OIL CONTROL**

- If pump has waited before installation for a long time (more than 3 months), bearings should be greased. If liquid oil is used in bearings, old oil should be removed and filled with new oil.
- Before running the pump, pump bearings should be checked whether dirt has entered inside it. If there is dirt inside bearings they should completely be cleaned and new liquid oil or grease should be filled.
- Oil filling or adding operations should be determined by enterprise according to conditions in workplace and operation. This method is efficient.
- Pumps which are lubricated with liquid oil are shipped without oil. This type of pumps should be filled with oil up to indicator level before starting to operation.

## **SAFETY CONDITIONS**

- Works should be done by obeying workplace occupational safety rules.
- Inside of pumps should be cleaned after fluid has been discharged from pump.
- Reliability of explosive, poisonous, hot and substances in crystal structure with respect to environment and human health should be assured.
- Considering that used cleaner and protector solvent wastes may give harm to environment and human health; precautions should be taken for preventing dissipation to environment and mixing to suction pool. Accumulation and putting the used waste solvents in disposal area should be cared.
- Working area where dismounting and installation works are performed should be clean.
- Pump should be free of all dangerous materials and be clean during return back.
- Lifting tools and equipments which are suitable with objective and occupational safety should be used in dismounting and installation operations.

## **DISMOUNTING OF PUMP AND REPAIR**

**ATTENTION!** - Before starting to any operation over pump always disconnect the electrical connections and be sure that it will not run mistakenly. Certainly obey the instructions which are given in "Safety Instructions".

## **Dismounting of Pump**

- Close the isolation valves in suction and discharge pipes.
- Open the fuses of electricity line fuses coming to motor as they will not carry current and remove control cable coming to motor from motor terminal box.
  
- Open the discharge plug under the scroll case and discharge the water inside pump.
- If the liquid inside pump is special, discharge it after taking necessary safety precautions.
- In liquid oil pumps, open discharge plug in bearing bed and discharge the oil.
- Remove coupling and other safety guards.
- Remove pump suction and discharge flanges and auxiliary pipe connections and disconnect pump from pipe system. There is no need in pumps where intermediate partial clutches are used. In pumps where such kind of clutches are used rotor can be taken out without separating scroll case from pipe system.
- Separate motor from pump, (not necessary in pumps with coupling) disconnect pump from frame and take outside.
- Uninstall the bolts which connect roller bearing bed to scroll case.
- Uninstall the bolts which connect seal box to scroll case
- Remove the clutch intermediate part in pumps having coupling. Use the occurred space and take the bearing group and rotor outside.
- Remove the clutch part over pump shaft by means of puller. Remove clutch wedge.
- Uninstall the impellor nut and remove clutch wedge. Use rust solvent if necessary.

## **Installation of Pump**

- Pump installation operation is made by reverse order of pump dismounting process.
- Before starting to installation operation, apply lubricious materials such as graphite, silicone or similar slippery substances over contact surfaces or bolt surfaces. If you can not find those substances use liquid oil.
- Do not use gaskets which you had removed. Use new ones having same dimensions. Be careful that new gaskets and O-rings are in same dimensions.
- Start installation from bearing group. Place the bearing into their places over shaft by using press. Place this part from clutch side towards bed housing. Place the bed covers from two side. Place the seal box and impellor and tighten the impellor nut.
- Connect the rotor group to body.

-Place the pump over the frame, install the motor and connect suction and discharge pipes and auxiliary pipes.


### **Seal**

- While starting to soft seal properly clean seal box, glen and seal capsule.
- Cut from seals having suitable dimension in sufficient amounts and in proper lengths diagonally. Wrap around the seal capsule and be sure that ends are completely covered.
- Place the first ring provided that joint place is at upper side and insert the seal by means of glen.
- This time Place the second ring provided that joint place will be in lower side. So place all seal rings. If there are water rings place them too.
- Place the glen and firstly tighten completely. By this way seals will take the form of seal box. Then loosen the glen. Rotate the shaft and slightly tighten and leave tightening while braking the shaft slightly.
- After pump is started drops of water should come from seal. Water amount should not be less than  $10 \text{ cm}^3/\text{min}$  and more than  $20 \text{ cm}^3/\text{min}$ . Reciprocally tighten or loosen glen nuts and find the setup.
- After performing glen adjustment control whether seal temperature very much for two hours. Seal temperature should not exceed  $80^\circ\text{C}$  for a pump which discharges a water in ambient temperature.

### **Pumps with Mechanical Seal**

- Water leakage does not occur in a mechanical seal which properly operates. Mechanical Seal does not need maintenance in cases that it does not have visible water leakage. Besides this impermeability of mechanical seal should be regularly controlled.
- Strictly obey the instructions of mechanical seal manufacturers instructions in pumps where mechanical seals are used.

## PUMP CROSS SECTIONAL DRAWING

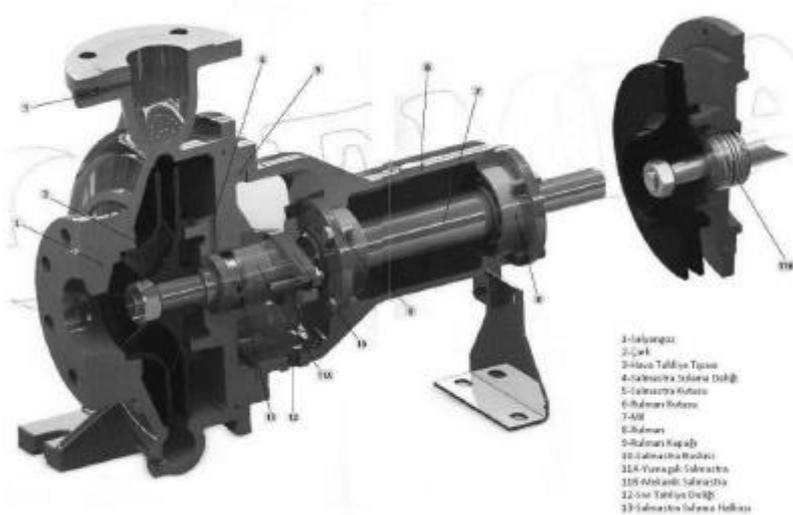

- 1) Scroll Case
- 2) Impellor
- 3) Air Relief Plug
- 4) Seal Watering Hole
- 5) Seal Box
- 6) Roller Bearing Box
- 7) Shaft
- 8) Roller bearing
- 9) Roller bearing cover
- 10) Seal Platen
- 11) A) Soft Seal
- 11 B) Mechanical Sea
- 12) Liqued Discharge Hole
- 13) Seal Watering Ring

## SPARE PARTS

- SEMPOMP warrants to provide the spare parts for TKF-MKF-TAF Series pumps for 5(five) years beginning from production date. You can always easily obtain the spare parts you need.

- In spare parts order, it will be sufficient for you to inform the following values which are written in pump nameplate.

Pump Type : TKF 80/200

Motor Power(P) and Revolution(n) : 30 kW - 2900 d/d

Production Year and Serial No : 12/2011 - 201112-001

Flow rate(Q) and Manometric Height (Hm): 125 m<sup>3</sup>/h - 97 mSS

## REASONS FOR FAILURES AND TROUBLE SHOOTING

In this chapter failures which can be seen in ARS type pumps, possible reasons (**Table 3**) and trouble shooting methods (**Table 4**) are given.

ATTENTION! Control the accuracy of all measurement gauges before starting to eliminate the failure operation.

FAILURES	POSSIBLE REASONS
Started pumps never discharges water	3-6-8-12-11-14
Flow rate decreases or no water is discharged	4-2-7-15
Motor is overloading	9-10-16-17-21-28-27
Bearings have over temperature	21-19-20-22-26
There is vibration in pump	13-18-21-25-23
Noise level is high	1-5-24

**Table 3**

1	There is air in liquid	Swirls occur since depth of submersion pipe is not enough and there fore air is not absorbed. Control the liquid level in suction tank and increase the depth of bottom/suction pipe back water valve.
2	Air pocket in suction pipe	Control the slope of suction pipe and whether there are suitable places for formation of air pockets, if any make necessary corrections.
3	There may be air in pump and/or suction line	Fill pump or suction pipe completely with liquid and repeat the start process
4	Air is be absorbed from seal, suction pipe, or connections. Pump absorbs liquid which is mixed with air	Control all connections in suction pipe. Check seals. If necessary feed seals with pressurized water. Check the submersion depth of suction pipe pr deep back water valve and increase submersion depth if necessary.
5	Pump operates with cavitations	NPSH of plant is very low. Check the water level in suction tank. Check whether there are over friction losses in suction line. Check whether isolation valve in suction line is completely open. If necessary place the pump in low levels and increase the load of pump at suction side
6	Suction depth is very much	If there is no obstacle which may cause clogging control the friction losses of suction line. If necessary use a suction pipe having larger diameter. If static suction depth is too much you should raise the height of water level in suction tank or pump should be places in lower levels.
7	Increase in discharge height	Check whether valves are completely open. Check whether there is an obstacle which may cause clogging in discharge pipe.
8	Pumps discharge height is insufficient	Actual discharge height of plant is higher than given values. Check the total static height and friction losses of discharge pipe. Using pipes having greater diameter may be solution. Check whether valves are completely opened.
9	Pump is operating at lower discharge height	Discharge height of plant is lower than given values. Lathe the impellor diameter according to manufacturer suggestions
10	Speed very much	Decrease the motor revolution if possible or Lathe the impellor diameter according to manufacturer suggestions
11	Speed very low	Check the voltage and frequency of line and check whether phase is missing in motor.
12	Pump rotates reverse	Check rotation direction of motor whether it is same with the direction which is indicated in pump body or nameplate
13	Impellor partially clogged	Clean the impellor

14	Impellor, check valve or filter clogged	Clean Impellor, check valve or filter
15	Impellor, partially filter clogged	Clean Impellor, or filter
16	Mechanical friction in pump	Check whether there are any obstacle or bend in pump rotor
17	Soft seals are over tightened	Loosen the seal bushing
18	Worn or malfunctioned impellor	Replace the impellor
19	Bearing covers are over tightened.	Check the covers and make necessary corrections
20	Flow rate is less than pumps necessary flow rate	Increase the flow rate, use by pass valve or line if necessary
21	Clutch adjustment is broken	Check the clutch rubber and adjust again
22	There is so much grease in bearing	Remove the excess grease
23	Imbalanced rotating parts	Adjust the balance of rotating parts
24	Pump operates out of its operation region	Check the operational region values
25	Shaft is bend	Check the shaft and replace if necessary
26	Insufficient lubrication or lubricant is dirty	Check the amount of lubricant, clean bearing bed and capsules and grease again
27	Motor Failure	Check the motor,. Motor is not suitable for its air conditioning position
28	Density or viscosity of discharged liquid is more than given value	Use motor having greater power

**Table 4**

## TIGHTENING MOMENT

SCREW DIAMETER	MAXIMUM TIGHTENING MOMENT(Nm)	
	CLASS PROPERTIES	
	8.8	10.9
M4	3	4,4
M5	5,9	6,7
M6	10	15
M8	25	36
M10	49	72
M12	85	125
M14	135	200
M16	210	310
M18	300	430
M20	425	610
M22	580	820
M24	730	1050
M27	1100	1550
M30	1450	2100
M33	1970	2770
M36	2530	3560

## EXPECTED NOISE LEVELS

Motor Power PN (kW)	Sound Pressure Level (dB)	
	Pump and Motor	
	1450 rpm	2900 rpm
<0,55	63	64
0,75	63	67
1,1	65	67
1,5	66	70
2,2	66	71
3	70	74
4	71	75
5,5	72	83
7,5	73	83
11	74	84
15	75	85
18,5	76	85
22	77	85
30	80	93
37	80	93
45	80	93
55	82	95
75	83	95
90	85	95
110	86	95
132	86	95
160	86	96

\* It is the value which is measured from 1 m distance from the pump in a free area over the surface which reflects sound without having sound screen.

## LIST DISPLAYING THE SERVICE STATIONS

### MANUFACTURER COMOANY'S

**Title : SEMPA ELK.MOT.SAT.POMPA İMLT.DEMİR  
TİC.İTH.İHRC.SAN.TİC.LTD.ŞTİ.**

**Address : Büsan Özel Organize San.Bölgesi 4.Sk. İlerisi  
No:43-45-47 Karatay / KONYA**

**Phone&Fax : 0 332 345 32 90 & 345 32 95**

**Service Scope: Pumps (Waste, clean, water, oil, fuel oil, Lpg, Cng)**

NO	TITLE	ADDRESS	NAME OF OFFICIAL	TEL&FAX
1	SEMPA LTD.ŞTİ.	Büsan Org.San.Böl. 4.Sk. İlerisi No:43-45-47 Karatay / KONYA	SEYİT MEHMET FERAH KAYA	0 332 345 32 90 0 332 345 32 95

**MANUFACTURER COMPANY**  
**SEMPA ELK.MOT.SAT.POMPA İML.DEMİR TİC.İTH.İHRC.SAN.TİC.LTD.ŞTİ.**

**Factort :**Büsan Org.San.Böl.4.Sk.İlerisi No:43-45-47 Karatay/KONYA/TÜRKİYE

**Tel :** +90 (332) 345 32 90 (4Hat) Fax: + 90 (332) 345 32 95

**Store:**Horozluhan Mah.Çakırlı Cad.No:23 Selçuklu / KONYA

**Tel :** +90 (332) 237 03 31 Fax: +90 332 235 43 64

**Web :**[www.sempaltd.com](http://www.sempaltd.com)

**E-mail :** [bilgi@sempaltd.com](mailto:bilgi@sempaltd.com)

# SEMPA

## EC-Declaration of Incorporation AT Üretici Beyanı

SEMPA Elektrik Motor Satış Pompa İmalatı  
Demir Ticaret İth. ve İhr. San.Ltd.Şti

Boson Ocađ. Örg.San.İst. 4.5k  
No:13-45-47 Karatay  
42000 KONYA

We declare that all our devices  
Aşağıdaki imalatlarımız için beyan ediyormuz:

Centrifugal Pumps Series MKF, TRF,TRF-I, TAF, ABS,SCE  
MKF, TRF,TRF-I, TAF, ABS,SCE Serisi Santrifüj Pompalar

comply with the following provisions applying to:  
aşağıdaki direktiflerin temel gereklilikleri karşılığında:

2006/42/EC Safety of Machinery  
2006/42/AT Makine Emniyet Yönetmeliđi

Applied harmonized standards of particular:  
Uygulanan özel ayarlanabilir standartlar:

EN ISO 12100-1:2007 EN 60335-1  
EN ISO 12100-2:2006 EN 14121-1:2008  
EN 60034-1

Applied national technical standards and specification in particular:  
Uygulanan özel ulusal standart ve parametreler:

TS EN ISO 9908 /1.3.2001

By altering the device without approval the declaration would be invalid.  
Cihazın yapılandırılması, onarımının değiştirilmesi veya değiştirilmesi için beyan geçerli değildir.

We hereby declare that our products described above is intended to be incorporated into other machinery and must not be put into service until the relevant machinery into which it is to be incorporated has been declared in conformity with the essential requirements of Council Directive 98/79/EC Safety of Machinery.

Beyan ettiğimiz cihazın yukarıda tanımlanan amaçla kullanılacağı ve başka bir makineye dahil edilmesi halinde 98/79/AT Makine Emniyet Yönetmeliđi temel gereklilikleri yerine getirildiği tespit edilmiş durumlarında geçerlidir.

KONYA, 15.12.2007

Seyit Mehmet Paralıođu  
General Manager / Genel Müdür

## **WARRANTY CONDITIONS**

1-) Warranty period starts with delivery of goods and it is for **2(two)** years.

2-) Complete of good including all parts under warranty of our company.

3-) In case that good had a failure within warranty period, duration which passes through warranty is added to warranty period. Repair time for good can not exceed 20 days. In case that there is not service station related with failure of good, this duration starts with the informing the seller, distributor, agency, importer, exporter or producer. It is possible for consumer to make failure notification by telephone, fax, e-mail, certified mail and similar ways. However proof liability belongs to consumer in dispute cases. If the failure of good can not be eliminated within **10** days; manufacturer, producer or importer is liable to deliver a similar product until repair has been completed.

4-) In case that product has failure because of labor or material failure, its repair will be performed without charging any amount regardless with labor costs, or replaced part prices.

5-) Although the repair right of product is used by consumer;

- Provided that remaining in defined warranty period after the date of delivery to consumer;

, , in case that maximum four times in a year or more than six time in warranty period defined by manufacturer-producer and/or importer it has a failure, and besides this if those failure prevents usage,

- exceeding the maximum time which is determined for repair;

- Provided that there is not any service station, by means of a report issued by seller, distributor, agency, representation, importer or manufacturer or produced indicating that repair is impossible; consumer may request the replacement free of charge, refunding or price deduction with same amount.

6-) Warranties which are caused by contrary use of product with user manual are not covered by warranty.

7-) Consumer may apply to **CUSTOMS AND COMMERCE MINISTRY**

**PROTECTION OF CONSUMER AND MARKET SUPERVISION GENERAL**

**DIRECTORATE** for the problems which may be related with warranty certificate.

### **MANUFACTURER COMPANY**

SEMPA ELK.MOT.SAT.POMPA İML.DEMİR TİC.İTH.İHRC.SAN.TİC.LTD.ŞTİ.

Factory :Büsan Org.San.Böl.4.Sk.İlerisi No:43-45-47 Karatay/KONYA/TÜRKİYE

Tel : +90 (332) 345 32 90 (4Hat) Fax: + 90 (332) 345 32 95

e-mail: bilgi@sempaltd.com web: www.sempaltd.com

**DISTRIBUTOR SEAL**



In addition that this guarantee does not cover the failures which may be caused by abnormal usage of pump also is not valid for following cases.

- Changes and repairs which are made by unauthorized service.
- Damages and failures which may be caused by using contrary with aspects that are written in user manual
- Damages and failures which may be caused by faults in suction and discharge lines of pump
- Damages and failures which may be caused by improper pump selection.
- Damages and failures caused by abrasives which may be found in water
- Especially the damages and faults which may be caused by liquids having different properties which are mentioned in user manual.
- Damages and failures which occur after delivery of product to consumer in loading, unloading, carrying, transportation and storage conditions.
- Low or high voltage, erroneous electrical installation and control cabinet, wrong connection of cable ends, and usage of pump out of voltage values which are written in pump nameplate.
- Damages and failures which may be caused by using cables with cross sections which are not suitable with pump power.
- Damages and failures which may be caused by fire, lighting and freezing.

Failures which may occur because of abovementioned events are repaired in return of charge.

Responsibility of filling warranty certificate and delivery to customer belongs to seller, agency or distributor where product is purchased.

Warranty will be void in cases that alteration is made over warranty, original series number over product is removed or altered.

WARRANTY CERTIFICATE

**MANUFACTURER OF IMPORTER COMPANY**

**Title: SEMPA LTD**

**Address: Büsan Özel Org. San. 4.Sk. İlerisi  
Elit San Sir. No:43-45-47**

**Tel: : 0 332 345 3290 (4 lines)**

**Fax: 0 332 345 32 95**

**Invoice Date:**

**Invoice No:**

**Certificate nı:108981**

**Company Official Signature and Seal**



**Products'**

**Type:**

**Trademark:**

**Model:**

**Serial No:**

**Delivery Date and Place**

**Seller Company**

**Title:**

**Address**

**Phone:**

**Invoice Date**

**Invoice No:**

**Sales Date**

**Seal Signature**

This certificate is issued according to permission of Customs and Commerce  
Ministry Protection of Consumers and Market Supervision General Directorate

**Customer**

**Name:**

**Address:**

**Phone**

**Fax:**

**Products'**

**Type:**

**Trademark:**

**Model:**

**Serial No:**

**Delivery Date and Place**

**Seller Company**

**Title:**

**Address**

**Phone:**

**Invoice Date**

**Invoice No:**

**Sales Date**

**Seal Signature**

**This part will be delivered to SEMPA LTD ŞTİ by agency, seller or distributor.**